

# Installation Instructions

## SNAP 'UL' ULTRA-LOW COLLAR

### PRODUCT:

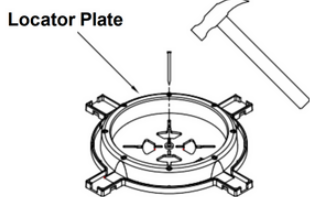
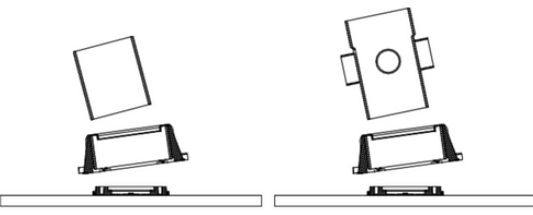
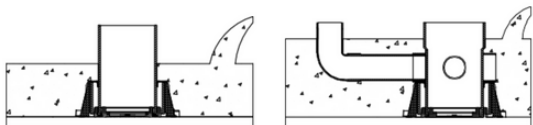

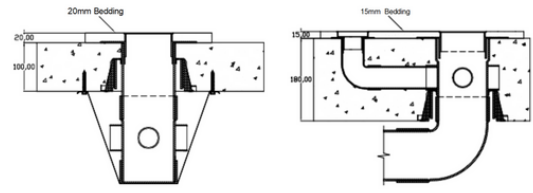
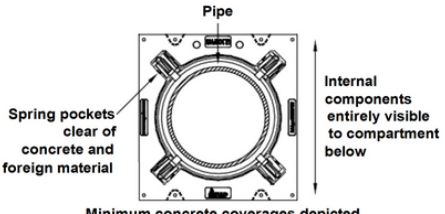
SNAP ULTRA-LOW UL100FWS

## APPLICATION

FWS - Floor waste  
and Shower  
S - Stack pipe  
installations



**IMPORTANT** The intumescent sleeve must not be altered or tampered with.

1	Mark the planned penetration centre point on the formwork. Use the windows (4b) of the locator plate (4) to position the central fixing hole (4a) over the centre of the mark. Secure the locator plate to the formwork using the central fixing hole.	
2	Inspect the collar to make sure it has not been damaged in transit and all components are present. Clip the collar onto the locator plate, ensuring the collar base flange (5) is flat on the formwork. Secure the collar to the formwork through preferred fixing points. Insert pipe section, or 4-way riser and required branches. (see website: <a href="http://www.snapcollars.com.au">www.snapcollars.com.au</a> for tested systems).	
3	Pour concrete to the required depth.	
4	Remove the formwork. The locator plate will be pulled from the collar with the formwork, leaving a clean hole and the internal components of the collar fully exposed to the compartment underneath. Remove form pipe if required.	
5	Install the pipework as designed. Pour required bedding onto the concrete.	
6	Inspect the collar to ensure no residual concrete remains in the Spring Pockets (2) around the fusible links and springs, and that there is no foreign material in the body of the collar. Ensure that the bottom of the collar is completely exposed to the compartment below.	 <p>Minimum concrete coverages depicted</p>

INS-UL-V0

# Installation Instructions

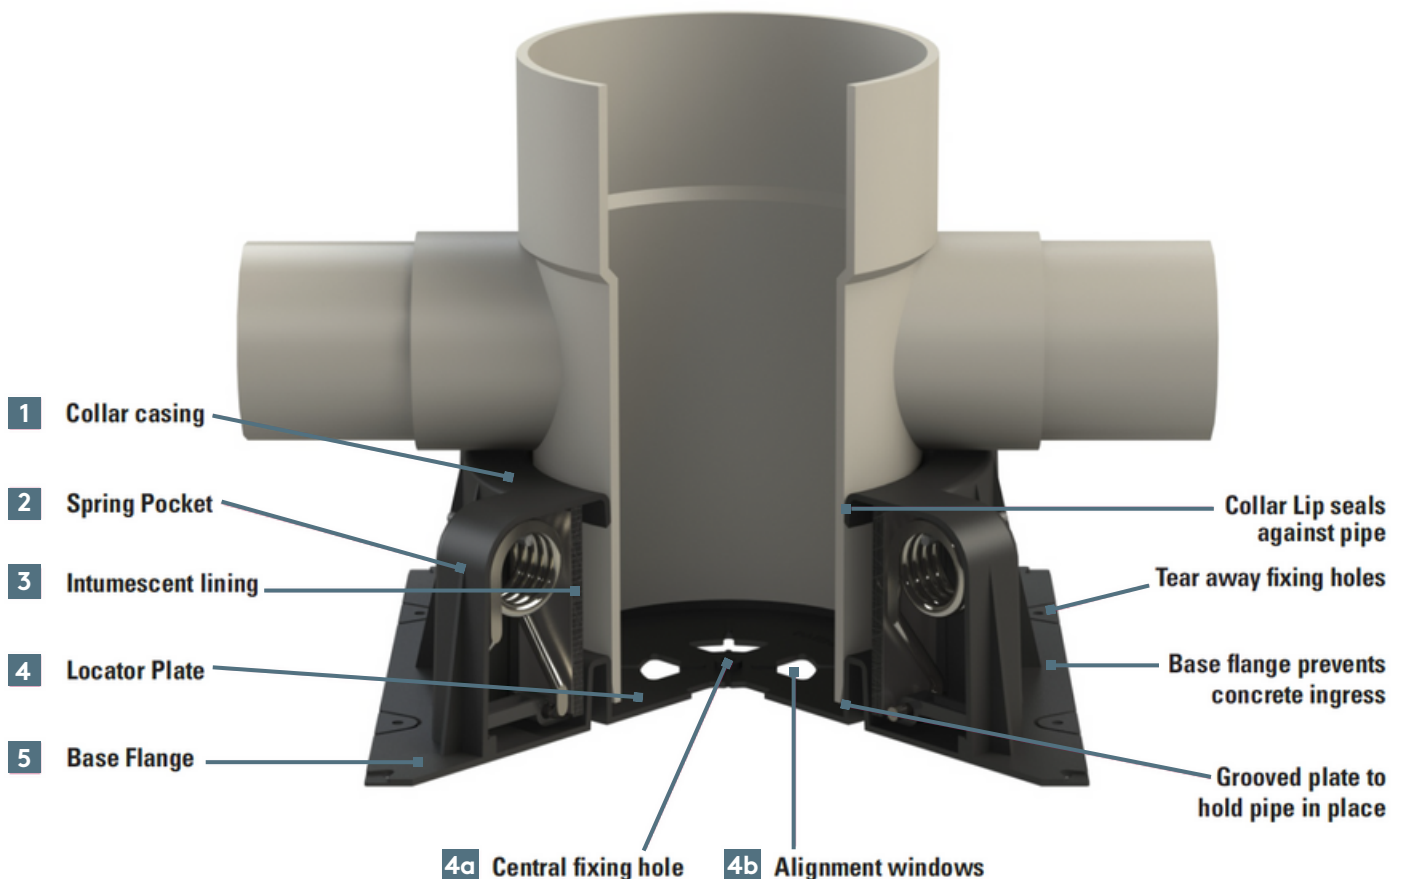
## SNAP 'UL' ULTRA-LOW COLLAR

### PRODUCT:

SNAP ULTRA-LOW UL100FWS

### APPLICATION

FWS - Floor waste  
and Shower  
S - Stack pipe  
installations



UL100FWS pictured

Variation	Detail
Number of branches used on 4-way riser	Any number of the branches of the 4-way riser can be used.
Length of in-slab plumbing	The pipework can emerge from the slab at any distance from the collar equal to or greater than 255mm from the centre of the central service to any of the branch centres.
Number of Stack and FW&S pipes permitted	The central pipework and the pipework from the 4-way riser can be any combination of Stack and Floorwaste & Shower installations.